

DRIVERS ACCOMMODATION

APPLICATION

This inspection applies to all vehicles.

PROCEDURE AND STANDARDS

1. Check cab, floor including wheel arches for condition and security.
2. Check steps and drivers grab handle for condition and security.

Additional for PSV's

3. Check drivers escape window:
 - a. for presence.
 - b. for operation.

REASONS FOR FAILURE

	Deficiency Category
1. A cab floor or internal wheel arch:	
a. Which is badly deteriorated or insecure.	MAJOR
b. Which is so badly deteriorated or insecure that it would impair the drivers control	DANGEROUS
2. Any step or step ring:	
a. Insecure.	MINOR
b. So insecure or dangerous that it is likely to cause injury.	MAJOR

Additional for PSV's

1. Drivers escape window:

a. Not provided.

MAJOR

b. Cannot be opened.

MAJOR